

Slimline Base B/O Window Candle - VT-9167 Series

Programmable Bulb with Remote Control (For Indoor Use Only)


INSTRUCTIONS:

1. Unscrew the bulb.
2. Insert 3x AA alkaline batteries (+) positive side up.
NOTE: Do not force the battery into the candlestick. Guide the battery past the metal contact at the top of the candlestick, and then it should drop with ease.
IMPORTANT BATTERY INFO:
Use only new, fully charged alkaline batteries. Do not mix new and old batteries. Lithium, rechargeable, and heavy duty batteries are not recommended because battery life will be significantly reduced when compared to alkaline.
3. Replace bulb.
 - Candle will turn on once the bulb is fully screwed in. (Default setting is twinkling action)
 - If bulb is removed to replace batteries, candle will return to default setting.
4. Use remote to change the preferred settings
 - ON/OFF | Steady/Twinkle | Length of Timer

HEIGHT ADJUSTMENT:


Candle height has two positions (10.5" and 9")

- Candle arrives in 9" height
- To adjust to 10.5" taller position, remove the rubber ring located at the base of the candlestick. Slide the candlestick up and out of the base. Replace rubber ring on candlestick. Push candlestick into top portion of the base until secure.

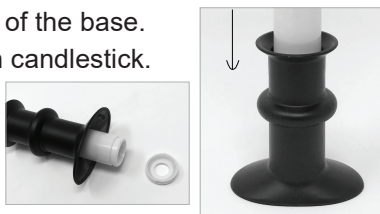

REMOTE CONTROL OPERATION:

Remote battery included. Remove tab before use. Battery replacement use CR2025 battery.

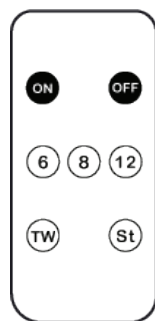

ON - On for 24 hours

OFF - Manual turn everything off

6 / 8 / 12 - Press to set timer function

NOTE: Increasing length of timer will decrease battery life (Approximately 30 days can be expected on 6hr timer)

Tw - Switch to Twinkle function

St - Switch to Steady on function

NOTE: Timer is interrupted by removing batteries or pressing OFF.

CARE:

- Remove alkaline batteries from candlestick when not in use. *Batteries left in the candle when not in use can leak and cause corrosion.*
- Remove alkaline batteries when the candle dims.
- Dispose of used batteries responsibly.
- Store in a temperature controlled environment with normal humidity.

TROUBLESHOOTING:

1. Candle Will Not Light

- Be sure to check the orientation of the batteries. Batteries should all be (+) positive side up.

2. Timer Seems to be Incorrect (Not Working)

- The timer may reset because the candle is moved abruptly, dropped, or tilted. If you suspect this may have happened please reset timer by turning unit OFF with the remote (or by removing the batteries) and reset timer with the remote. Place gently in desired position on window sill. Timer will also reset if batteries are removed.

3. Light Appears Dim

- Make sure that batteries are new and fully charged. Do not mix old and new batteries. The candle should remain close to full brightness for about 30 days (with 6 hour timer setting).
- One or more batteries facing the wrong direction (all should be (+) positive side up).

3 YEAR WARRANTY:

Our warranty covers any defect out of the box or any problems that may occur within three years of the purchase date. Warranty does not cover damages caused by improper use, storage, or handling.

We strive to make this process simple and pain-free!

For the most efficient service, please email us through our website: www.612vermont.com.

If preferred, call us toll-free: 1-877-750-0971

REPLACEMENT PART(S) INFORMATION:

- Replace the bulb with model # VT-9227-4R-W
- Replace candlestick tube with model # VT-TUBE3AAW

WARNING! This product is not a toy and not intended for use by children. Adult use only.

Made in Taiwan

Rollier Hardware, Inc
DBA 612 Vermont®
600 Washington Rd
Pittsburgh, PA 15228
www.612vermont.com

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
 - Even used batteries may cause severe injury or death.
 - Call a local poison control center for treatment information.
 - Battery type CR2025, 3 Volts, Lithium cell.
 - Non-rechargeable batteries are not to be recharged.
 - Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate.
-
- Ensure the batteries are installed correctly according to polarity (+ and -).
 - Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
 - Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
 - Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.