

Battery Operated Window Candle—VT-1806SC

(For Indoor Use Only)


INSTRUCTIONS:

1. Remove candlestick from the decorative base.
2. Un-screw the bottom cap of the candlestick by turning counterclockwise.
3. Insert 2x AA alkaline batteries (+) positive contact first into the candlestick. Be sure that (+) and (-) terminals on each battery match the (+) and (-) contacts shown in the diagram.

CAUTION: Do not mix new and old batteries.

Do not mix alkaline and standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

NOTE: Lithium, rechargeable, and heavy-duty batteries will have significantly reduced battery life when compared to alkaline.

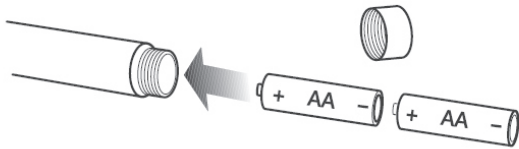

4. Screw the bottom cap back into the candlestick by turning clockwise. **NOTE:** Candle will now be on. If left on, the candle will turn off automatically after six hours and turn back on again the next day at the same time. The timer cycle will be interrupted when batteries need replacing.
5. Candle can be turned off by un-screwing the bottom cap several turns.

3 YEAR WARRANTY:

Our warranty covers any defect out of the box or any problems that may occur within three years of the purchase date. Warranty does not cover damages caused by improper use, storage, or handling.

We strive to make this process simple and pain-free! For the most efficient service, please email us through our website: www.612vermont.com.

If preferred, call us toll-free: 1-877-750-0971

Rollier Hardware, Inc
DBA 612 Vermont®
600 Washington Rd
Pittsburgh, PA 15228
www.612vermont.com

Made in China

WINDOW & SUCTION CUP INSTALLATION:

1. Clean the window and allow it to dry before installing.
2. Position suction cup onto candlestick where appropriate. The clip will snap onto the candlestick to ensure a good grip.
3. Press firmly at the center of the suction cup so that it flattens out entirely and removes all air. The candle is now held firmly in place.

NOTE: For best results, the surface should be above 40°F when applied. Changes in temperature or humidity may gradually make cups lose suction. We recommend installing these candles to double or triple-pane windows only.

CARE:

- Remove batteries when not in use.
Batteries left in the candle when not in use can leak and cause corrosion.
- Replace batteries when the candle dims.
- Dispose of used batteries responsibly.
- Store in a temperature controlled environment with normal humidity.

TROUBLESHOOTING:

1. Candle Will Not Light

- Be sure to check the placement of the batteries. This candle runs on 2x AA alkaline batteries. Please reference the instructions portion of this sheet for more information.

2. Timer Seems To Be Incorrect (Not working)

- The timer will set the moment of alkaline battery installation, and the cap is on the candlestick. The 'automatic' timer sets for 6 hours ON and 18 hours OFF from this moment. To change the timer to another time during the day, you will need to unscrew the cap, let the light turn off, then re-screw down the cap at the desired start time.
- The timer may reset because candle is moved abruptly, dropped, or tilted. If you suspect this happened, please reset the timer and set it gently in position.

3. Light Appears Dim

- Make sure that batteries are new and fully charged. Do not mix old and new batteries. The candle should remain close to full brightness for about 40 days.

Still having issues? Please reference the warranty information.

WARNING! This product is not a toy and not intended for use by children. Adult use only.