

# Battery Operated 3-Light Candelabra—VT-1530 Series

## (For Indoor Use Only)

### INSTRUCTIONS:

---

1. Remove the bottom cover by pushing down on the tab and lifting.
2. Insert three NEW size-D alkaline batteries (not included). Pay attention to positive (+) and negative (-) contacts to ensure proper positioning.  
**CAUTION:** Do not mix new and old batteries. Do not mix alkaline and standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.  
**NOTE:** Lithium, rechargeable, and heavy duty batteries will have significantly reduced battery life in this product when compared to alkaline.
3. Slide the cover back into position and snap in place.
4. Select your preferred setting with the slide switch (Down for off, middle for flicker, and up for steady-on feature).
5. Once slide switch is turned to flicker or steady the 8 hour timer will start. The product will stay on for 8 hours and then go off for 16 hours. The cycle will repeat every 24 hours.
6. Candelabra will operate at optimal brightness for 70 days. Once light becomes to dim, replace with new batteries.

### 3 YEAR WARRANTY:

---

Our warranty covers any defect out of the box or any problems that may occur within three years of the purchase date. Warranty does not cover damages caused by improper use, storage, or handling.

We strive to make this process simple and pain-free!  
For the most efficient service, please email us through our website: [www.612vermont.com](http://www.612vermont.com).

If preferred, call us toll-free: 1-877-750-0971

### CARE:

---

- Remove batteries when not in use.  
*Batteries left in the candle when not in use can leak and cause corrosion.*
- Remove batteries when the candle dims.
- Dispose of used batteries responsibly.
- Clean with a non-abrasive cleaner.

### TROUBLESHOOTING:

---

#### 1. Candle Will Not Light

- Be sure batteries are in the proper position. This candle runs on 3 D alkaline batteries. Please reference the instructions portion of this sheet for more information.
- Slide switch must be in the middle position to flicker and all the way up for steady light.

#### 2. Timer Seems To Be Incorrect (Not working)

- This candle is equipped with an 8 hour timer (ON 8/OFF 16). This timer will start immediately after you slide the switch to either the flicker or steady positions. If the timer is not operating for the 8 hours you want it to, please slide the switch down to off and back up to the desired light setting at the exact time you want the light to turn on.

#### 3. The Light Appears Dim

Make sure that the batteries are new and fully charged. Do NOT mix old and new batteries. The candle should remain at optimal brightness for about 70 days.

Still having issues? Please reference the warranty information.

Rollier Hardware, Inc  
DBA 612 Vermont®  
600 Washington Rd  
Pittsburgh, PA 15228  
[www.612vermont.com](http://www.612vermont.com)

Made in China

**WARNING!** This product is not a toy and not intended for use by children. Adult use only.